

# **BEEKO** **REFRIGERATION**

**LC 120**

**4.4 cu.ft.**  
**Barber Fridge**

Operating  
Instructions

Congratulations on your choice of a **BEKO** quality Appliance which has been designed to give you service for many years.

## **WARNING!**

## **IMPORTANT!**

DO NOT connect the appliance to the electricity supply until all packing and transit protectors have been removed.

- Leave to stand for at least 4 hours before switching on to allow compressor oil to settle if transported horizontally.
- If you are discarding an old fridge with a lock or latch fitted to the door, ensure that it is left in a safe condition to prevent the entrapment of children.
- This larger fridge must only be used for its intended purpose i. e the storing of edible foodstuff.
- Do not dispose of the appliance on a fire. Your appliance contains non CFC substances in the insulation which are potentially flammable if exposed to fire. We suggest you contact your local authority for disposal information and facilities available.

- We do not recommend use of this appliance in an unheated, cold room.

(E.g.:garage, conservatory, annex, shed, out – house etc.)

To obtain the best possible performance and trouble free operation from your appliance it is very important to carefully read these instructions.

Failure to observe these instructions may invalidate your right to free service during the guarantee period.

Please keep these instructions in a safe place for easy reference.

<b>BEKO</b> <b>LARGER FRIDGE</b> <b>LC 120</b>	
PERFORMANCE	
Energy efficiency class	B
Energy consumption – kW·h/year	167
Net storage – vol fresh food ltrs(cu. ft.)	105
Net storage – vol ice – box(cu. ft.)	–
Total net vol – ltrs(cu. ft.)	105
Frozen food compartment rating	–
Conservation time from failure	–
Freezing capacity fresh food – kg	–
Climate class	SN
Operating noise level dB(A)	39

## CONTENTS

	PAGE
SAFETY FIRST/ELECTRICAL REQUIREMENTS	3 – 4
TRANSPORTATION INSTRUCTIONS	4 – 5
INSTALLATION INSTRUCTIONS	5 – 6
REPOSITIONING THE DOOR	6 – 7
SUGGESTED ARRANGEMENT OF FOOD IN THE LARDER FRIDGE	7 – 8
TEMPERATURE CONTROL AND ADJUSTMENT	9
STARTING	9 – 10
DEFROSTING	10
CLEANING AND CARE	10 – 11
REPLACING THE INTERIOR LIGHT BULB	11 – 12
DO'S AND DON'TS	12 – 13
PROBLEM SOLVING – TROUBLE SHOOTING	13
GUARANTEE DETAILS	13 – 14
HOW TO OBTAIN SERVICE	14

Please note this product is Year 2000 compliant

## ELECTRICAL REQUIREMENTS

Before you insert the plug into the wall socket make sure that the voltage and the frequency shown in the rating plate inside the appliance corresponds to your electricity supply.

We recommend that this appliance is connected to the mains supply via a suitable switched and fused socket in a readily accessible position. It means that the appliance must be positioned so that the plug is accessible.

If the supply cord is damaged, it must be replaced by the manufacturer, a BEKO Authorised service agent or a similarly qualified electrician in order to avoid a hazard.


## WARNING! THIS APPLIANCE MUST BE EARTHED

 
If the fitted re – wireable plug is not suitable for your socket, then the plug should be cut off and ASTA approved BS 1363 plug fitted. Destroy the old plug which is cut off as a plug with bared cord could cause a shock hazard if inserted into a socket elsewhere in the house. The re – wireable plug on this appliance incorporates a 13 A fuse. Should the fuse need to be replaced an ASTA approved BS 1362 fuse of the same rating must be used. Do not forget to refit the fuse cover. In the event of losing the fuse cover the plug must not be used until a replacement fuse cover has been fitted. Colour of the replacement fuse cover must be the same colour as that visible on the pin face of the plug. Fuse covers can be obtained from a BEKO Authorised Service Agent.

Only the manufacturer or its service agent or a similarly qualified electrician could do this.

## IMPORTANT! FITTING A DIFFERENT PLUG

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug proceed as follows: (See diagram).

1. Connect the green – yellow or green (Earth) wire to the terminal in the plug marked 'E' or with the symbol  or coloured green and yellow.
2. Connect the blue (Neutral) wire to the terminal in the plug marked 'N' or coloured black.
3. Connect the brown or red (Live) wire to the terminal in the plug marked 'L' or coloured red.

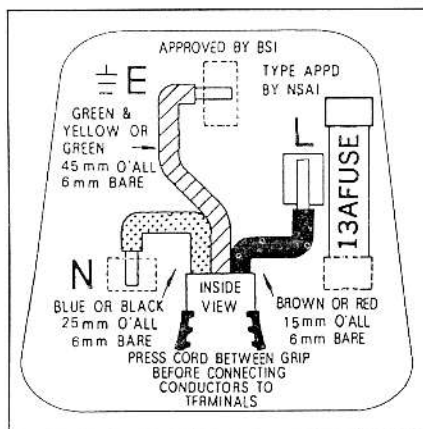

With alternative plugs a 13 A fuse must be fitted either in the plug or adaptor or in the main fuse box.

If in doubt contact a qualified electrician.

Only the manufacturer or its service agent or a similarly qualified electrician could do this.

## TRANSPORTATION INSTRUCTIONS

1. The appliance should be transported only in a vertical upright position. The packing as supplied must be intact during transportation.
2. If during the course of transport the appliance has been transported horizontally, it must not be operated for at least 4 hours to allow the system to settle.
3. Failure to comply with the above instructions could result in damage occurring to the appliance. The manufacturer will not be held responsible if these instructions are disregarded.
4. The appliance must be protected against rain, moisture and other atmospheric influences.

**IMPORTANT:** Care must be taken while cleaning/carrying the appliance to avoid touching the bottom of the metal cross member at the back of the appliance as you might injure your fingers and hands.

This appliance is not designed for stacking with any other appliance.

Do not attempt to sit or stand on top of your appliance as it is not designed for such use. You could injure yourself or damage the appliance.

**“IMPORTANT:** Make sure that mains cable is not caught under the appliance during and after carrying/moving the appliance, to avoid the mains cable becoming cut or damaged.”

Do not allow children to play with the appliance or tamper with the controls.

Beko( UK ) Ltd. declines to accept any liability should the instructions not be followed.

 
## IMPORTANT

### INSTALLATION INSTRUCTIONS

1. If possible avoid placing the appliance near cookers, radiators or in direct sunlight as this will cause the compressor to run for long periods. If installed next to a source of heat or refrigerator, maintain the following minimum side clearances:

From Cookers	4" (100mm)
From Radiators	12" (300mm)
From Freezers or Larder fridges	4" (100mm)

2. Make sure that sufficient room is provided around the appliance to ensure free air circulation. See the diagram on the right.

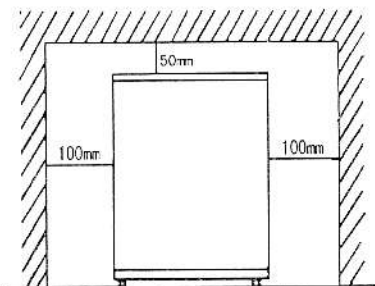


3. The appliance should be located on a smooth surface. The two front feet can be adjusted as required. To ensure that, your appliance is standing upright adjust the two front feet by turning clockwise or anti – clockwise, until the product is in firm contact with the floor. Correct adjustment of feet avoids excessive vibration and noise.
4. Refer to “Cleaning and Care” section to prepare your appliance for use.

5. This appliance has been designed to operate in ambient temperatures between + 10 and + 32 degrees C (50 and 90 degrees F). Therefore if the appliance is installed in an unheated/cold room (E. g. : Conservatory/annex/shed/garage etc. ) then the appliance may not operate and as a result the storage time of food may be reduced.

## REPOSITIONING THE DOOR

 Follow the step by step instructions and the diagram below. Numbers in brackets refer to diagrams.

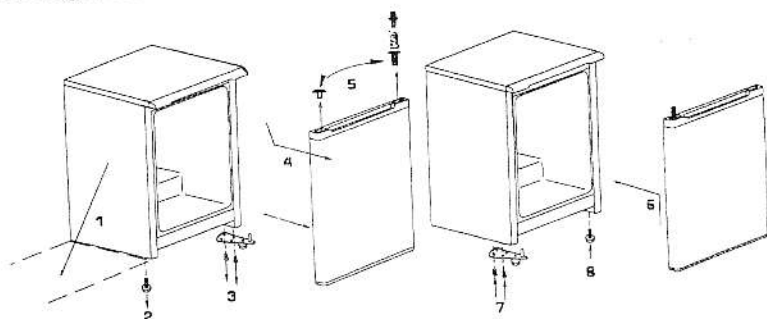

1. Switch off at the socket outlet and pull out the mains plug.
2. Remove all food, loose items and fittings from inside the appliance and door shelves.
3. Carefully lay the appliance on its left hand side. (1) (You may need somebody to help you.) Take care not to damage the appliance by laying on some protective material (e. g. its original packaging). Make sure that you lay the appliance on its left hand side, otherwise compressor oil may block the pipes and you may damage the appliance.
4. Unscrew and remove the LHS front feet (2).
5. Unscrew the bolts and remove the bottom hinge while holding the door (3).
6. Remove the door carefully from the top hinge by sliding towards the right hand side (4).
7. Reposition top hinge pin and related parts and also the blanking plug on the opposite side and stand the door safely (5).
8. A screw is fitted to the cabinet where the bottom hinge will be assembled. Remove this screw and refit on the opposite side.
9. To refit the door, locate the top hinge pin and related parts in the door, attach to the cabinet and hold the door (6).
10. Fit the bottom hinge making sure the lower holes on the hinge are used (7). If necessary adjust and then tighten the bolts. Ensure, that the door opens and

closes easily and that there are no gaps allowing air into the cabinet. If there are gaps between the door seal and the cabinet, adjust the door seal by gently pulling away from the door using fingers.

11. Fit the other front foot(8).

12. Carefully stand your appliance. (You may need somebody to help you.)


Adjust the front feet ( See Installation Instructions)

13. Put back all loose items and fittings.

14. Wait for at least 4 hours to allow the system to settle before switching on.

Spare plastic parts supplied with the appliance are for your future use during door repositioning.

## SUGGESTED ARRANGEMENT OF FOOD IN THE LARDER FRIDGE

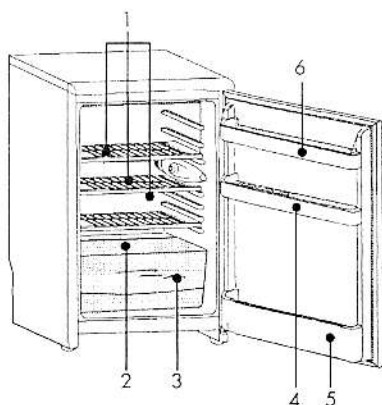 

LC 120

Arrangement Examples ( See diagram ).

1. Baked, chilled cooked food, dairy products.
2. Meat, sausages, cold cuts, cans.
3. Fruit, vegetables, salads.
4. Small cans, tubes.
5. Beverages, large bottles.
6. Dairy products.



The following guidelines and recommendations are suggested to obtain the best results and storage hygiene.

1. The appliance is suitable for the short term storage of fresh food and drinks.
2. Dairy products should be stored in the special compartment provided in the door liner.
3. Cooked dishes must be stored in airtight covered containers and are best placed on either of the removable shelves.
4. Fresh wrapped produce can be placed on the shelf. Fresh fruit and vegetables should be cleaned and stored in the crisper bins.
5. Bottles can be placed in the door section.
6. To store raw meat, wrap in polythene bags and place on the lowest shelf. Do not allow to come into contact with cooked food to avoid contamination. For safety, only store raw meat for two to three days.
7. For maximum efficiency, the removable shelves should not be covered with paper or other materials thus allowing free circulation of cool air.
8. Keep the food packed, wrapped or covered. Allow hot food and beverages to cool before placing them in the fridge. Do not store explosive substances in the fridge. High proof alcohol must be stored upright in sealed containers. Left over canned food should not be stored in the can.
9. Some fruit and vegetables suffer damage if kept at temperatures near 0 degrees centigrade. Therefore wrap pineapples, melon, cucumbers, tomatoes and similar produce in polythene bags.


## TEMPERATURE CONTROL AND ADJUSTMENT

 Operating temperatures are controlled by the thermostat(see diagram). Settings may be made from 1 to 7, the coldest position.

When the appliance is switched on for the first time, the thermostat should be adjusted so that after 24 hours, the average fridge temperature is no higher than + 5 degrees C ( + 41 degrees F). We recommend you set the thermostat half way between the minimum(1) and maximum(7) setting and monitor to obtain the desired temperature i.e. towards 7 (maximum) you will obtain a colder fridge temperature and vice versa. Some sections of the fridge may be cooler or warmer(such as the salad crisper and the top part of the cabinet)which is quite normal.

Over ambient temperatures of 25 degrees C(77 degrees F) especially in summer turn the thermostat knob towards 7. Under ambient temperatures of 25 degrees C(77 degrees F) turn the thermostat knob to a half way position.

Frequent door openings cause higher internal temperatures, so close the door as soon as possible after use.



## STARTING

### Final Check

Before you start using the larder fridge check that:

1. The feet have been adjusted for perfect levelling.
2. The interior is dry and air can circulate freely.
3. Clean the interior as recommended under "CLEANING AND CARE."
4. Insert the plug into the wall socket and switch on the electricity supply. When the door is open the interior light will come on.
5. You will hear a noise as the compressor starts up. The liquid and gases sealed within the refrigeration system may also give rise to noise, whether the compressor is running or not which is quite normal.
6. Slight undulation of the top of the cabinet is quite normal due to the manufacturing process used, so do not worry, it is not a defect.
7. We recommend that you set the thermostat knob to 4 (four) and monitor the temperature to ensure the appliance maintains desired storage temperatures ( see section Temperature Control and Adjustment. )

8. Do not load the appliance immediately it is switched on. Wait until the correct storage temperature has been reached. We recommend that you check the temperature with an accurate thermometer (see section Temperature Control and Adjustment).

 
### Important Note:

Ice formation at the back is normal, do not worry. (See Defrosting)

## DEFROSTING

The larder fridge defrosts automatically.

The defrosting water runs to the drain tube via a collection channel (1) and is evaporated in a special container at the back of the appliance (see diagram).

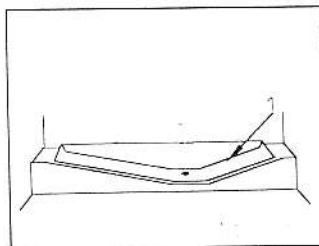

During defrosting water droplets may form at the back of the larder fridge where concealed evaporator is located.

Some droplets may remain on the liner

and refreeze when defrosting is completed. Do not use pointed or sharp edged objects such as knives, forks to remove the droplets which have refrozen.

If at any time the defrost water does not drain from the collection channel check to ensure that no food particles have blocked the drain tube.

## CLEANING AND CARE

 
- \* \* We recommend that you switch off the larder fridge at the socket outlet and pull out the mains plug before cleaning.
- \* \* Never use any sharp instruments or abrasive substances, soap, household cleaner, detergent and wax polish for cleaning.
- \* \* Use luke warm water to clean the cabinet of the fridge and wipe it dry.
- \* \* Use a damp cloth wrung out in a solution of one teaspoon of bicarbonate of soda to one pint of water to clean the interior and wipe it dry.
- \* \* Make sure that no water enters the temperature control box.
- \* \* If the larder fridge is not going to be used for a long period of time switch it off, defrost it, remove all food, clean it and leave the door ajar.
- \* \* We recommend that you polish the metal parts of the product (i. e. door exterior, cabinet sides) with a silicone wax (car polish) to protect the high quality paint finish.

- \* \* Check door seals regularly to ensure they are clean and free from food particles.
- \* \* Never:
  - Clean the worktop with unsuitable material;
  - Subject it to hot temperatures in any way,
  - Scour, rub etc. ,with abrasive material.
- \* \* Removal of door tray:
  - To remove a door tray, remove all the contents and then simply push the door tray upwards from the base.
- \* \* Make sure that the special plastic container [Defrost Water drain tray] at the back of the appliance is clean at all times. If you want to remove the tray to clean it, follow the instructions below:
  - Switch off at the socket outlet and pull out the mains plug.
  - Gently pull out the special container situated above the compressor motor.
  - Clean the container and wipe it dry.
  - Refit the container and switch on the appliance.

## REPLACING THE INTERIOR LIGHT BULB(See diagram below)

Should the light fail to work switch off at the socket outlet and pull out the mains plug.

Then ensure the bulb is screwed in until it is secure in the bulb holder(See below). Replace the plug and switch on.

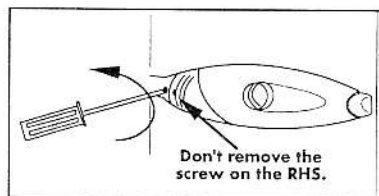

If the light still fails to work obtain a replacement E14 screw cap type watt (Max 15W) bulb from your local electrical store and then fit it as follows:

1. Switch off at the socket outlet and pull out the mains plug. You may find it useful to remove shelves for easy access.

2. Remove the light diffuser cover screw. Use cross – headed screwdriver.
3. Pull off the light diffuser cover and remove the light bulb.
4. Replace the burnt – out light bulb.
5. Reassemble reversing the sequence and operations.
6. Carefully dispose of the burnt – out light bulb immediately.

Replacement light bulbs can easily be obtained from a good local electrical or DIY store.

## DO'S AND DON'TS

- Do – Clean your larder fridge regularly.
- Do – Keep raw meat and poultry below cooked food and dairy products.
- Do – Keep food for as short a time as possible and adhere to best before, and “use by” dates.
- Do – Store food in accordance with the instructions given on the packets that you buy.
- Do – Take off any unusable leaves on vegetables and wipe off any soil.
- Do – Leave lettuce, cabbage, parsley and cauliflower on the stem.
- Do – Wrap cheese firstly in greaseproof paper and then in a polythene bag excluding as much air as possible. For best results take out of the larder fridge an hour before eating.
- Do – Wrap raw meat and poultry loosely in polythene or aluminium foil. This prevents drying.
- Do – Wrap fish and offal in polythene bags.
- Do – Wrap food which have a strong odour or can dry out in polythene bags aluminium foil or place in airtight container.
- Do – Wrap bread well to keep it fresh.
- Do – Chill white wines beer, lager and mineral water before serving.
- Don't – Put hot food into the larder fridge. Let it cool down first.
- Don't – Store bananas in your fridge.
- Don't – Store melon in your fridge. It can be chilled for short periods as long as it is wrapped to avoid it flavouring other food.
- Don't – Leave the door open for long periods as this will make the larder fridge more costly to run.

- Don't – Cover the shelves with any protective materials which may obstruct air circulation through them.
- Don't – Store poisonous or any dangerous substances in the larder fridge. Your larder fridge has been designed for the storage of edible foodstuffs only.
- Don't – Consume food which has been stored for an excessive time in the larder fridge.
- Don't – Store cooked and fresh food together in the same container. They should be packaged and stored separately.
- Don't – Let defrosting food or food juices drip onto food in your larder fridge.
- Don't – Use electrical appliances inside the fridge.

## PROBLEM SOLVING—TROUBLE SHOOTING

If the appliance does not operate when switched on, check;

- The plug is inserted properly in the socket and that the power supply is on. (to check the power supply to the socket, plug in another appliance)
- The fuse has blown/circuit breaker has tripped/main distribution switch has been turned off.
- The temperature control has been set correctly.
- New plug is wired correctly if you have changed the plug.

If the appliance is still not operating at all after above checks, please refer to the section "HOW TO OBTAIN SERVICE".

Please ensure that above checks have been made as a charge will be made if no fault is found.

## GUARANTEE DETAILS

- This product is guaranteed for twelve months from the date of the original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge during this period.
- The guarantee is subject to the following provisions:
- The guarantee does not cover accidental or transit damage, misuse, cabinet parts, knobs or consumable items such as light bulbs.
- The guarantee does not cover the loss of food in the event of a breakdown. Food loss insurance is often included within your household content's insurance policy or may be available separately from your retailer.
- The product must be correctly installed, located and used in accordance with the instructions contained in this booklet.
- The product is designed for domestic use only. The installation of this product on business premises for commercial use may invalidate the guarantee.

- The guarantee is only valid within the boundaries of the United Kingdom and the Republic of Ireland.
- The guarantee will be rendered invalid if the product is resold or has been affected by inexpert repair.
- Beko(UK) Ltd. disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to and does not diminish your statutory or legal rights.

## HOW TO OBTAIN SERVICE

Please keep your purchase receipt in a safe place as you will need to produce it should the product require attention whilst under guarantee. Please also complete the details below, you will need it when requesting service. Model and Serial Numbers can be found on the rating label which is on the left hand side of the fridge inner liner.

MODEL NUMBER:	
SERIAL NUMBER:	
DATE OF PURCHASE:	
PURCHASED FROM:	

- In the event of a breakdown please refer to the Operating Instructions and check all plugs, fuses and electricity supply.
- Before requesting service please also check the trouble shooting guide in the Operating Instructions as a charge may be levied where there is no fault found even though the appliance may still be under guarantee.
- In the absence of specific instructions from your retailer to obtain service under guarantee, please refer to the chart below. Whenever you request service please advise the name of the supplier.

LOCATION	CONTACT
UK	0870 241 0638
Northern Ireland	Refer to service instructions from retailer. (If none supplied – call 0870 241 0638)
Republic of Ireland	01 862 3411

- Service out of manufacturer's guarantee: If you have purchased an extended guarantee from the retailer, please contact your insurance company or retailer. Otherwise please call the above numbers where service can be obtained at a charge.
- Because we continually strive to improve our products, we may change our specifications and designs without prior notice.

2002 0612

BEKO(UK)Ltd, Beko House, Caxton Way, Watford, Hertfordshire, WD18 8UF

Tel: 01923 654650

Fax: 01923 819653

e-mail: [service@beko.co.uk](mailto:service@beko.co.uk)

[www.beko.co.uk](http://www.beko.co.uk)

919000 2082

Revision No. : 1